

# Airvine® VineOS™ WaveCore

Firmware Release Version 1.0.1.129



Date: Dec 2024

#### **DISCLAIMER**

Airvine Scientific ("Airvine") makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties or merchantability or fitness for any particular purpose. Further, Airvine reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Airvine to notify any person of such revision or changes.

#### Copyright © 2024 by Airvine Scientific.

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Airvine Scientific.

### **Contents**

| Contents                      |   |
|-------------------------------|---|
| Introduction                  | 3 |
| New Features and Enhancements | 3 |
| Resolved Issues               | 4 |
| Known Issues                  | 4 |
| Software Upgrade Process      | 5 |

#### Introduction

This VineOS firmware release v1.0.1.129 (filename: avWCimage-1.0.1.129.bin) is a maintenance release that adds minor features, usability, and reliability enhancements for the WaveCore 1000RH Indoor Point-to-Point Wireless Bridge.

### **New Features and Enhancements**

The v1.0.1.129 firmware release included the following new features and enhancements:

- Antenna Alignment Mode
  - LED refresh rate has been lowered so that the ALIGN LED will update its status every 2 seconds instead of every 15 seconds allowing alignment feedback to be more responsive to physical changes in the antenna orientation.
  - Alignment Mode duration has been lengthened from 90 seconds to 5 minutes.
- The default SSID name for the 2.4 GHz Management ratio has been changed
  - The SSID was "AirVine2" in prior releases but is now "avb\_[mac address]" so that it is now unique to each WaveCore radio.
- A red colored **Reboot Reminder Indicator** icon has been added at the top of the VineManager Web GUI screen.
  - When the red Reboot Reminder Indicator flashes green, that reminds the user that there are pending "saved" changes to the configuration that that require a reboot to take effect. After the unit is rebooted, the **Reboot Reminder Indicator** icon will no longer be displayed.
- The Ethernet RJ45 LEDs behavior has been updated so that when no active ethernet cable is connected, both LEDs remain OFF.
- The blue Antenna Alignment Button has been moved from the Configuration/Wireless screen to the Monitor/Wireless screen.
- A RESTAPI has been implemented to allow for remote monitoring and configuration of the device.
- Minor usability improvements have been implemented to enhance the overall user experience.

Please refer to the WaveCore Datasheet, Configuration Guide, Installation Guide for description of supported features and capabilities. These documents and this software release can be downloaded from www.airving.com/support.

## **Resolved Issues**

The following Known Issues have been resolved with this release.

| ID Number | Description                                                                                                            |
|-----------|------------------------------------------------------------------------------------------------------------------------|
| WTSD-1008 | ALIGN LED continues to stay "ON" even though there is no connection. When disconnected, the ALIGN LED should turn off. |
| WTSD-972  | SYSTEM LED can occasionally continue to blink green even though the system has successfully booted up.                 |
| WTSD-1017 | Changing Ethernet Settings doesn't result in a pop-up "reboot required" message                                        |

## **Known Issues**

The following are Known Issues with this release.

| ID Number | Description                                                                                                                                                                                                                                                                                                                                     |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WTSD-1122 | When proxy managing a device, it is not possible to download support logs. The workaround is to log directly into the devices IP (vs. proxy manage it) and issue the download support logs command.                                                                                                                                             |
| WTSD-1140 | Changing Frequency Channel on the SN and rebooting the SN does not change the Frequency Channel. Changing the Frequency Channel requires confirming or setting the frequency channel on the CN and then re-booting the CN.                                                                                                                      |
| WTSD-996  | SYSTEM LED will display RED when the system is working properly but there was a past uncleared critical alarm in the system alarm log located in the upper part of the screen in VineManager Web Gui. Manually clearing the alarm log in VineManager on a system that is working properly, will cause the SYSTEM LED to go back to GREEN color. |
| WTSD-995  | Using older browsers can occasionally result in blank screens.                                                                                                                                                                                                                                                                                  |
| WTSD-985  | User account (User ID/Password) is not saved in configuration files for security reasons. As a result, reloading configuration files will not load user/password configuration information requiring such information to be manually re-entered.                                                                                                |
| WTSD-983  | If while using TFTP to upgrade system firmware and the connection to the TFTP server is slow (takes more than a five minutes), the system occasionally gets into a state whereby the upgrade process does not complete. Upgrading using a faster connection will avoid this issue.                                                              |
| WTSD-862  | After reboot, user must login a second time to access VineManager                                                                                                                                                                                                                                                                               |

# **Software Upgrade Process**

Please refer to the WaveCore Configuration Guide or WaveCore Getting Started Guide regarding how to upgrade software of the WaveCore Device. These documents can be downloaded at the Airvine support web site <a href="https://www.airvine.com/support">www.airvine.com/support</a>.